

# SKS Door Lock Settings

Which doors open when you grab a locked door on a car with a Smart Key System can be changed. Neither back door can be opened if the car is locked or used to unlock. To change settings, on the fob, hold the door lock button and then the panic button for 5 seconds or so. The car will beep to let you know it has changed.

1. The default setting from the factory is that opening the front passenger door will unlock all the doors. Briefly touching the hatch handle will open all the doors; holding the hatch handle will open the hatch as well.
2. After the first beep, the driver's handle unlocks all, just like the passenger and hatch handles do during the default setting.
3. After the second beep, driver, passenger, and hatch handles only unlock individually.

Pushing the fob's door lock and panic buttons cycles through the different settings. Be sure and press the door lock button before the panic button or you may surprise yourself.