

Turning off BEEPS in a Prius

1. Power on the car to IG-ON or READY. IG-ON will do for this purpose.
2. Using the Trip/ODO button, set the Trip/ODO display to ODO - not Trip A or Trip B
3. Power off the car.
4. Now power the car to READY (brake on). This is required so that step 6 works correctly.
5. **Immediately**, within 6 seconds of powering on, press and hold the Trip/ODO button for 20 seconds or more. Do not release, just hold it for 20 seconds.
6. Then **WHILE STILL HOLDING ODO button**, shift the "gear" selector to R, then press the Park button. Now release the Trip/ODO button.
7. If the last step was successful, ***b on*** or ***b off*** should be displayed in the location where the Trip Odometer or Odometer is normally displayed. *b on* is beep on, and *b off* is beep off.
8. Press the Trip/ODO button to toggle the mode to the one you want.
9. Now power the car off to exit the toggle mode.
10. Power the car on to READY and confirm the reverse beep status by shifting to R. The beep should not be audible if *b off* was selected, and should be audible if *b on* was selected.

The above procedure turns off the back up beep. To turn off the driver seat-belt beep, instead of shifting in step 6, latch your seat-belt. This takes some contortions since you have to do it with your left hand since your right hand is still holding the ODO button. Be prepared by pulling the seat-belt out all the way and holding the strap in your teeth so there will be no tension. To turn off the passenger seat-belt beep, at step 6 have the passenger sitting in the passenger seat latch that seat-belt buckle. Always wear your seat belt when driving on a public road.